

Please check your receiver model

For the receiver 6200IRD - silver receiver.

1. press MENU button to entering configuration tools (pass code: 0000), then select "Installation";
2. under "Installation", select "Manual Search";
3. in "Manual Search",
 - (1) select satellite SatMex 6;
 - (2) press GREE button to edit TP;
 - (3) enter 12089 in Frequency, and 11719 in Symbol Rate;
 - (4) after entering above parameters, signal bar will get green. Press OK button to scan data.

RECEIVER MODEL MPEG-2/MPEG-4 SD/HD SAT 01-IR

From Main Menu please follow the following steps:

1. INSTALLATION
2. SATELLITE SEARCH
3. Enter "0000" (zero) for passcode
4. From SATELLITE SEARCH menu, make sure SatMex6 is highlighted in yellow
5. Press OK on remote control
6. Press **YELLOW BUTTON** on remote "TP"
(You should see "TP LIST" on right side of screen)
7. Select 12080/25635
8. Press OK
9. Press **BLUE BUTTON** on remote "TP EDIT"
(You should see Tp Edit list on your screen)
10. FREQUENCY should be highlighted in yellow, and using your remote control please enter 12089 as frequency
11. Press "down" arrow on remote to highlight SYMBOL RATE in yellow
12. Using your remote please enter 11719 to change SYMBOL RATE
13. POLARIZATION should be HORIZONTAL
14. MODULATION should be QPSK
15. FEC RATE should be on AUTO
16. Press **RED BUTTON** on remote to SAVE changes
17. After saving changes, now you should see EIDT TP LIST
18. Select **RED BUTTON** on remote for TP SEARCH
19. You will see SEARCH OPTION page
20. SEARCH RANGE should be ALL CHANNEL
21. NETWORK SEARCH should be ON
22. Select **RED BUTTON** on remote to start search
23. Now locate BVN channel as you have previously

*** Please enter remote control slowly to prevent pressing too many buttons at the same time which can cause your receive to freeze. If this occurs, please power off your receiver by using the remote control or the button on back of receiver**